Thank you for purchasing this product.

Please read this instruction carefully to understand its features and safety cautions

FEATURES

- Wireless Charger
- Simple design with a touch button
- Five steps dimming brightness
- Three modes for CCT
- Eye protection
- ◆ 60 minutes timer
- USB output
- Memory function for the brightness and temperature
















60 mins timer








Eye protection




USB output


PARTS INDICATOR

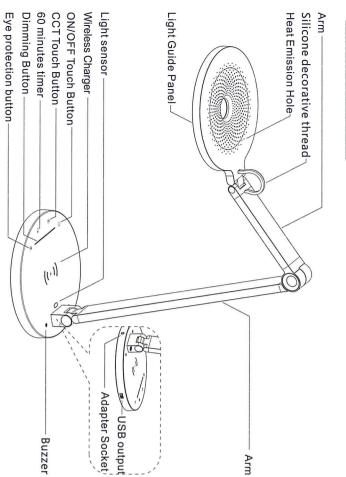



hijdra.com



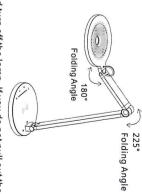


- adapter, then turning on the lamp, the brightness will be same as last time. \blacksquare Power on/off: Touch this power button $\binom{1}{2}$ to turn on and turn off the lamp. If you do not pull out the
- Brightness adjustment: Touch < button, you can slide adjustment with five steps dimming
- modes as follows. lacktriangledown Lighting mode: Touch this button lacktriangledown to adjust the color temperature repeatedly, and there are three
- off 1 hour later. When touching again, the indicated light is off and 1 hour timer is canceled ■ One hour timer: Touch 🕒 button, the indicated light is on, and it means the lamp will be automatically
- to the surrounding environment, and the lamp center luminance will keep 1000Lux. ■ Eye protection: Turn on ⊚ button, the light sensor will adjust the brightness automatically according

WIRELESS CHARGER







should buy one. Then connect the receiver to your phone, put your phone on the charging zone of the If your phone has no built-in wireless receiver, you lamp base, your phone will be charged.

SPECIFICATIONS

it will be charged directly when you put it on the charging zone of the lamp base.

If your phone has built-in wireless receiver,

Item	LED Table Lamp
Power	10W
Voltage	AC100-240V. 50/60Hz
Adapter output	DC 12V / 2A
USB output	5V / 1A
	4700-5300K
CCT	3700-4300K
	2700-3300K
Lifespan	35000h
CRI	≥80Ra
Center luminance (40cm)	1000LUX(max)
Material	ABS+PC
Operating temperature	-20°~45°
Product size	180×180×410mm
N.W.	1625g
Colors	White